

DAVISCOMMS (S) PTE LTD
361 Ubi Road 3, #04-06,
Armorcoat International Building,
Singapore 408664.
Tel : (65) 547 1127
Fax : (65) 547 1129

DS010301

AVONT

Alphanumeric POCSAG Pager
User's Guide

Bravo 700

I thank you

for choosing the **Bravo 700**, the 2/4-Line alphanumeric POCSAG pager.
A technologically advanced yet user-friendly pager that will give you years of reliable service.

The Pager is a **dynamic communication tool** used by over **150 million people** around the world. It is the **smallest, lightest** communication tool available.

With its **fixed monthly subscription and low battery usage**, the pager is the most economical communication tool available. Over the years, paging utility has increased from **receiving numbers to text messages & more**.

To ensure a full understanding of how the **Bravo 700** works, please read this User's Guide carefully.



Index

			You are here
Get Start	Buttons,	Functions	Function Menu
Features.	Backlight.	Turn On/OFF.	
..... 1 2 3 4
Alerts.	Time/Date,	Battery level.	Pager control;
..... 5	Alarm 7	contrast, zoom,
 6		etc..... 8
Scheduler,	Tel dir:	Tel dir:	Messages
"Tel dir	- folder menu	- new entry, edit	Personal folder.
..... 9 10 11 12

* Pager model dependent.

Message:	Personal folder	Scheduler	Scheduler
receiving	function menu	- details	- folder function
..... 13 14 15 16
Scheduler:	Scheduler -msg	Mail (contd.)	Mail folder
- new entry, edit	Mail	icons	function menu.
..... 17 18 19 20
Cont'd folder	Cont'd folder	Cont'd folder	Cont'd folder
..... 21	(contd.)	function menu	- password
 22 23 24
Maintenance	Pager care,	Symbols	Symbols &
Battery info	Maint, patent	Static icons	Icons (Contd.)
..... 25 26 27 28

Getting Started


Pager Features

The Bravo 700 offers a wide range of useful features.

- 4-line display, 21 characters per line OR
- 2-line display, 16 characters per line.
- 40 personal msg slots.
- Schedule directory - 16 slots.
- *Telephone directory - 16 slots.
- Message protection - 20 personal, 10 confidential (icon).
- Move personal msg to Confidential folder.
- Copy personal msg to Schedule folder / *Telephone dir.
- 3-digit password to read Confidential folder (default password = 000).
- Message time, date and day stamp.
- Message full indication (display & icon).
- Continuous msg indicator (icon).
- Message deletion - Selective / All.
- Delete all outdated schedule msg.
- Page-by-page read mode, auto update, 3 speeds (user selectable).
- Zoom in (enlarge) message display.
- Screen contrast (0-7 level).
- 1 Std, 7 pleasing alerts, 2 std POC-SAG audio alert (user selectable).
- Vibration, sleep, vibra-call & double-chirp modes.
- Maildrop alert - individual slot control (user selectable).
- Real time clock - 12/24 Hr. (user selectable).
- Memory retention during battery replacement.

* Pager model dependent.

Function Buttons

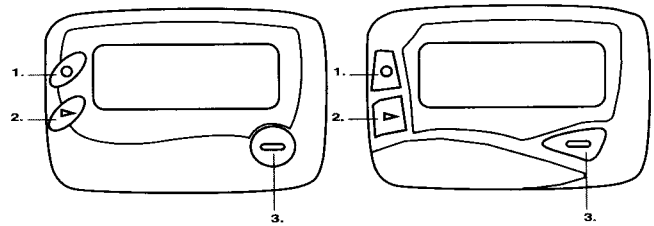


1. Function Button
2. Select Button
3. Read/On Button


Backlight


Press and hold ● for 2 seconds to turn on your pager's backlight.
Press ● for 2 seconds to turn off the backlight manually.

Function Details




Pager ON

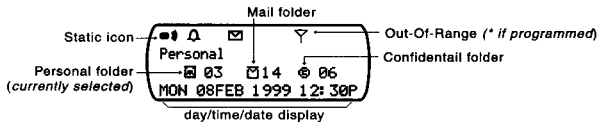- Press and hold  for 2 second to turn on your pager. The status screen is displayed.






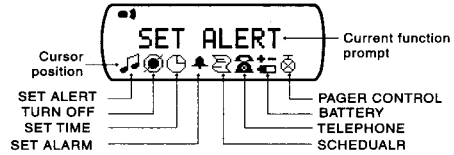
The pager returns to the standby screen after the time out period,  is displayed at the top left hand corner.

Pager OFF


- Press  to go to Function Menu screen.
- Press  to select TURN OFF function.
- The "TURN OFF ?" is displayed in the function screen.
- Press  again to confirm turning your pager off.

Function Menu

- Press  to enter the Function Menu screen from the status screen.
- Press  to move to the next Function Menu icon.
- Press  to enter the current selected function sub-menu (function-setting mode).



Alert Mode

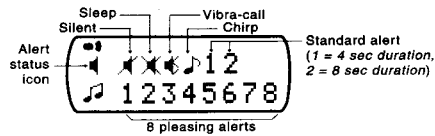

- Press **▶** to advance the different alert modes; from audio/pleasing alert (1 to 8) to silent, sleep, vibra-call, and chirp.
- Press **●** to confirm your selection.

The alert status is updated in the status screen as below.

- | | |
|--|---|
| ■ Audio:
pleasing alert and chirp. | ● Sleep:
pager receives message but no alert. |
| ● Silent:
vibration. | ■ Vibra-call:
vibration follows by audio alert. |


Time and Date



⌚ Current time appears on the screen.

- Press **●** to choose the hour (of time).
- Press **▶** to highlight the minute field then press **●** to choose the value.
- Repeat the steps to choose the value of AM/PM/24Hr, day, month, and year fields.
- Press **↵** to update your setting and return to the status screen.


Alarm



⚡ Alarm OFF appears on the screen.


- Press ● to select Alarm ON.
- Press ► to move to the time field.
- When alarm is switched ON, press ● to change the time fields (hour, minute, AM/PM) so that your pager alerts.
- Press ● to update your setting.

Battery Level

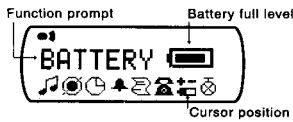

- When the cursor is on the Battery icon in the Function menu screen, the battery level indicator is displayed.
- If a bar is left, this indicates a low battery condition.

Pager Control

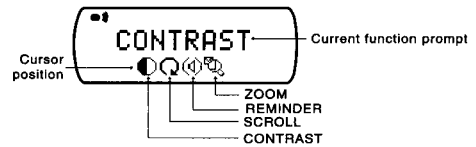

- Press ● to enter screen contrast setting (current control)
- Press ► to more to the next control icon.
- Press ● to enter the selected control setting screen.

(i) Contrast / (iii) Reminder Alert / (iv) Zoom

- to (i) Select 0 to 7 level indicator [►].
- (iii) Switch from "REMINDER OFF" to "REMINDER ON", i.e., pager alerts every 2 minutes is there is an unread message.
- (iv) Switch from "ZOOM OFF" to "ZOOM ON", i.e., to enlarge displayed characters (for message only).
- to Confirm the above setting and return to the status screen.

(ii) Scroll

- to Switch from "page-by-page read" mode to "automatic page update" switch the speed of scrolling: "FAST", "MEDIUM", and "SLOW".
- ▶ to Move to the speed field.
- to Confirm setting and return to the status screen.

Scheduler


Your pager can serve to remind you of important appointments you have. It can store 16 scheduled messages that come with date and time.

Read more about "Scheduler - details" on page 15, after you know about Personal folder/messages.

***Telephone Directory**


You can store a maximum 16 friends' or business associates' numbers in your pager.

* Indicates Pager model dependent.

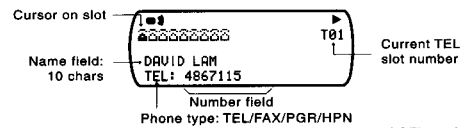

- : display content of current slot, name, and number (TEL: telephone / FAX: fascimile / PGR: pager / HPN: handphone).
- ▶ : move to the next icon slot.
- : enter Telephone Directory Folder Menu screen.


Telephone Directory - Folder Menu

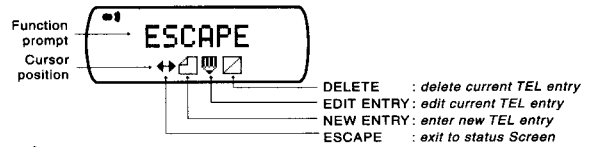

- Press ▶ to move to the next function icon.

- Press **[Enter]** to enter the selected function and to activate it. A confirmation message "?" comes with "DELETE".
- Press **[Enter]** to again to confirm.

Telephone Directory - New Entry

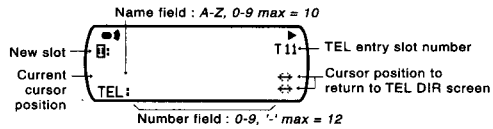

- **[Right Arrow]** : advance character set (move through FAX/PGR/HPN when cursor is on TEL).
- **[Left Arrow]** : reverse all character set for text.
- **[Right Arrow]** : advance cursor position.
- **[FAX]** "DIR FULL" is displayed when all slots are taken up. No new entry is allowed.


Telephone Directory - Editing

You can edit the stored telephone entries when required. The button operations in this mode is similar to "New Entry".

Message Features

Personal Folder

- Press **[Enter]** to enter Personal Folder screen from the status screen when the cursor is on the folder.

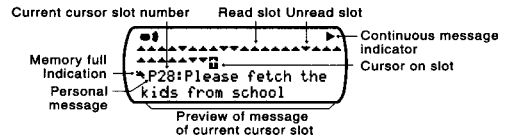


Personal Folder Screen

- **[Enter]** : display content of current slot.
 - **[Right Arrow]** : move to the next message icon slot.
 - **[Enter]** : enter Personal Folder Function screen.
- Your pager can receive up the 40 Personal messages.

Receiving Message

When a message is received, your pager alerts according to your set alert mode.

- Press to read the message.

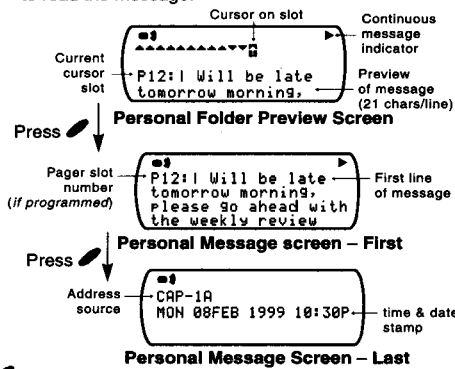


- Press until you reach to the end of the message and time-date stamp screen is displayed.

When an error message is received and read, an "E" is appended in front of the pager slot number (if programmed) OR the message (if slot numbering is not programmed).

Personal Folder Function Menu

- Press to enter Personal Function screen from Personal Folder screen.

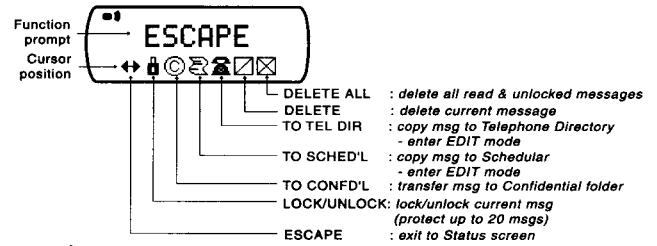


- Press to move to the next Personal Folder Function prompt.
- Press to enter the selected function and to activate it.

- A confirmation message "?" comes with "DELETE ALL", "DELETE", "TO TEL", "TO SCHED'L", and "TO CONFID'L".
- Press ● again to confirm.
- *MEM FULL" is displayed when the targeted folder (Confidential, Tel Dir, or Scheduler) is full.*

You can enter Personal Message Function menu by pressing ● when you are reading the message. The operation is the same as Personal Folder Function Menu except there is no "DELETE ALL" function.


Scheduler - details

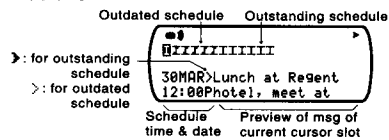

- : display content of current slot.
- ▶ : move to the next message icon slot.
- : enter Scheduler Folder Function screen.


Scheduler Folder Function Menu

Press ● to enter Scheduler Folder Function screen from Scheduler Folder screen.

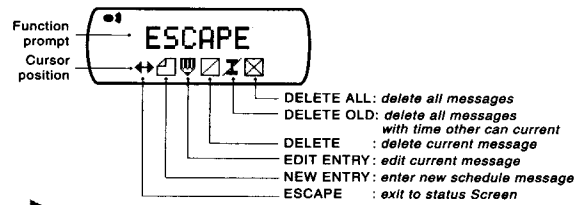

- Press ▶ to move to the next Scheduler Folder Function prompt.
- Press ● to enter the selected function and to activate it.
A confirmation message "?" comes with "DELETE", "DELETE OLD" and "DELETE ALL" functions.
- Press ● to confirm.

Scheduler - New Entry & Entry Editing




Time-date editing screen

Current time and date is displayed for "NEW ENTRY" and Personal Message transferred.

You can change the scheduled time and date in this screen.

- Press to -return to Scheduler Folder screen.
- Press to -enter message editing mode.



Message editing - new entry


- : advance character set (space, A-Z, ',', '.', ':', '/', 0-9, ':', and ';').
- : reverse of character set.
- : advance cursor position.

You can enter your scheduled message (New Entry) OR edit messages transferred from Personal Folder.

"MEM FULL" is displayed when all slots are taken up. No new entry is allowed.

Scheduler - Message Preview

- When any button is pressed while your pager is in the standby mode, Scheduler Preview screen displays last outdated and outstanding Scheduler messages (i.e. message with time set in the future of the current time).




- : display current scheduled message.
- : move to the next outstanding Schedule Preview screen.
- : exit to status screen.

Mail (Information Service)

Your pager can receive information such as world news or financial report (the extent of information received depends on your service provider). A maximum of 24 mail slots, each with 5 messages can be received.

- Press to enter Mail Folder Screen from the status screen when the cursor is on the folder.

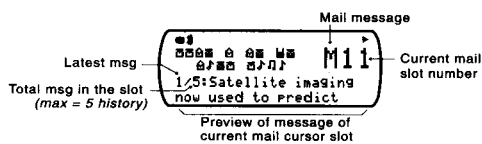

Icons in Mail screen

	Read		Read (with Alert)
	Unread		Unread (with Alert)
	Empty		Empty (with Alert)
	Cursor on slot		Cursor on slot (with Alert)

Space: address source is not for Mail message.

- : display content of current mail; begins with latest message of the slot.
- : move to the next Mail icon slot.
- : enter Mail Folder Function screen.

Mail Message Screen



- : display content till the end of the mail with time-date stamp + address source.
- : move to the next message; "2/5" → "3/5" → "4/5" → "5/5".
- : enter Mail Message Function screen.

Mail Folder Function Menu

- Press to enter Mail Folder Function Screen from Mail Folder Screen.



- Press to move to the next Mail Folder Function prompt.
- Press to enter the selected function and to activate it. A confirmation message "?" comes with "DELETE ALL" and "DELETE".

- Press **▶** again to confirm.

You can enter Mail Message Function menu by pressing **●** when you are reading the mail. The operation is the same as Mail Folder Function message expect the following:

- “DELETE ALL”: deletes all messages in current slot.
- “DELETE”: deletes current message of current slot.

Confidential Folder (if programmed)


Confidential messages are protected by password.

- Press **▶** to enter Password screen from the status screen when the cursor is on the folder.



- ▶** : advances cursor position.
- : increment current digit.

After entering the 3-digit password, your pager checks if the password is correct.
 -If the password is incorrect, “PSW WRONG” appears.
 -If the password is correct, Confidential screen appears.

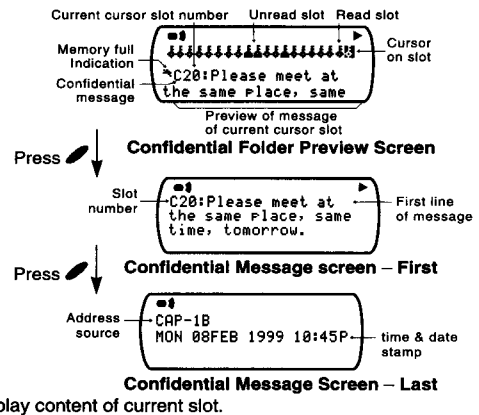


▶ : display content of current slot.

- ▶ : move to the next message icon slot.
- : enter Confidential Folder Function screen.

Confidential Folder Function Menu


- Press ● to enter Confidential Folder Function Screen from Confidential Folder Screen.

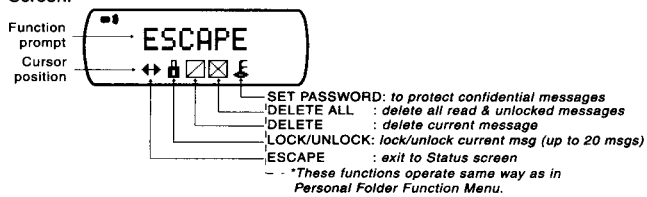

For operations & button sequence of Delete All, Delete, Lock\Unlock, and Escape - refer to "Personal Folder Function Menu" on page 14.

Confidential Folder - Set Password

- Press ● to Set Password screen from Confidential Folder Function Screen when the cursor is on the icon.

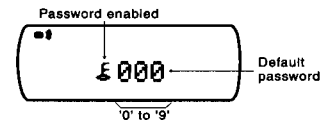

- : increment current digit; switch between password enabled and disabled.
- ▶ : advance cursor position.
- : update password setting and exit to Confidential Folder screen.

You can enter Confidential Message Function Menu by pressing ● when you are reading the message.


The operation is the same as Confidential Folder Menu except there is no "DELETE ALL" and "SET PASSWORD".

Maintenance

Battery Information

This pager is designed to operate on one 'AAA'-size alkaline battery. The correct time and any stored message will remain intact for up to one minute after the battery is removed.

To install or replace a battery:

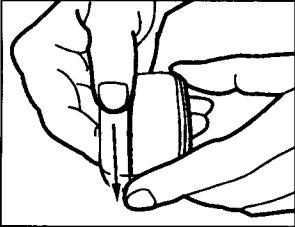

- Place the pager face down in the palm of your hand.
- Push with a click to unlock the battery door and slide it out as shown.
- Slide a new battery into the battery compartment. Ensure that pager is OFF and the battery polarity is correct.
- To close battery cover, the dot on the cover must be aligned to the dot on the battery casing.

 Do not press any button while replacing the battery.

Care of your Pager

To maintain the fine optical quality of your pager's display screen, please do not subject the pager to extreme temperatures or moisture. To clean the pager housing, use a soft, non-adhesive cloth moistened with a mild soap and water solution. Wipe the surface with a second cloth moistened with clean water. Do not immerse the pager in water. Do not use any other cleaning solutions.

Repair and Maintenance

Your pager, if properly handled, will give you many years of trouble-free service. However, if servicing is required, please contact your paging service provider for more information.

Icons & Symbols

Static Icons

	Audio Alert		New Message Indicator
	Silent Alert		Duplicate Message (<i>if programmed</i>)
	Vibra-call Alert		Locked Message
	Sleep / Standby Mode		Out-Of-Range indicator (<i>if programmed</i>)
	Alarm Enabled		Continuous Message Indicator (press to read the next screen)

Message Icons

	Personal		Mail		Confidential
	-read folder		-read folder		-read folder
	-unread folder		-unread folder		-unread folder
	-cursor on folder		-cursor on folder		-cursor on folder
	<i>Personal message</i>		<i>Mail message</i>		<i>Confid'l message</i>
	-unread		-unread		-unread
	-read		-read		-read
	-cursor on msg slot		-cursor on msg slot		-cursor on msg slot
	Locked/		Empty maildrop		Cursor on locked msg
	Unlocked msg				

Other Icons

	Scheduler		Tel Directory		Lock, Unlock msg
	Unexpired Sched'l entry		Tel entry		Delete a msg
	Expired Sched'l entry		Cursor on Tel entry		Delete All
	Cursor on Sched'l entry		Edit Tel entry		
	Delete all Sched'l msgs				

Setting/Control Icons

	Alert		Pager control		Time-Date
	-Audio		-Contrast		Alarm ON/OFF
	-Silent		-Scroll ON/		Battery
	-Sleep		-Scroll OFF,		Escape (Return back)
	-Vibra		-Reminder		Turn OFF
	-Chirp		-Zoom		